

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

Before Use

- Inspect for damage and replace if necessary:
 - Face seal ensure it is inserted properly and free from splits and tears.
 - · Visor, its surround and gasket.
 - Forehead seal.
 - · Head harness.
 - Comfort pad/s.
- Replace Peel Off visor covers (if used).

Monthly

• Carry out all the "Before Use" inspections thoroughly and create a record of this monthly check.


After Use

- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect surfaces with 3M[™] 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents



REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE CORRECT LEVELS OF PROTECTION



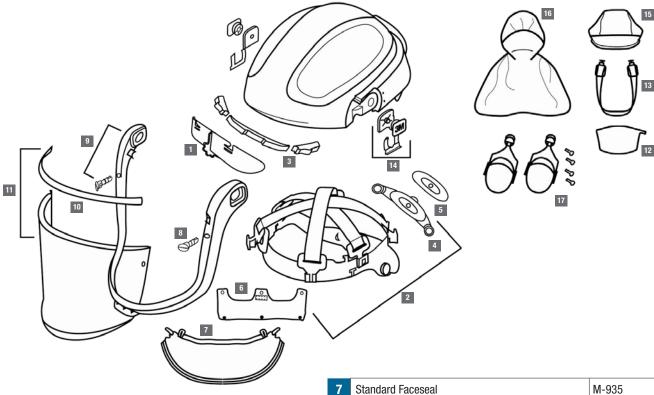

| | | 3M Part No | |
|-----------------------------|---|------------|--|
| | 3M [™] Versaflo [™] M-306 Respiratory Helmet, with Coated Visor and Comfort Faceseal | M-306 | |
| | 3M [™] Versaflo [™] M-307 Respiratory Helmet, with Coated Visor and Flame Resistant Faceseal | M-307 | |
| Accessories and spare parts | | | |
| 1 | Airflow Deflector | M-316 | |
| 2 | Head Suspension | M-350 | |
| 3 | Forehead Seal | M-354 | |
| 4 | Rotary Ratchet | M-953 | |
| 5 | Size Reducing Ratchet Comfort Pad | M-956 | |
| 6 | Forehead Comfort Pad | M-957 | |

| 7 | Standard Faceseal | M-935 |
|----|--|-------------|
| 7 | Comfort Faceseal | M-936 |
| 7 | Flame Resistant Faceseal | M-937 |
| 8 | Visor Frame Buttons | M-919 |
| 9 | Visor Frame Assembly | M-920 |
| 10 | Visor Gasket | M-921 |
| 11 | Coated Visor | M-927 |
| 12 | Peel-Off Visor Covers | M-928 |
| 13 | Chin Strap | M-958 |
| 14 | Visor Pivot Kit | M-960 |
| 15 | Flame Resistant Headtop Cover | M-972 |
| 16 | Head, Neck and Shoulder Cover | M-976 |
| 17 | 3M™ Peltor™ Hearing Protector H31P3AF Helmet Attachment | H31P3AF 300 |

Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.



Occupational Health & Environmental Safety Group

3M United Kingdom PLC

3M Ireland Limited

The Iyearth Building

3M Centre, Cain Road, Bracknell Berkshire RG12 8HT Tel: 0870 60 800 60 www.3M.co.uk/ohes 3M Ireland Limite The Iveagh Building The Park Carrickmines Dublin 18 Tel: 1 800 320 500

